


SILHOUETTE 7 SHELF STARTER KIT



THIS PRODUCT SHOULD BE PERMANENTLY ANCHORED TO THE WALL OR OTHER SUITABLE SURFACE TO AVOID SERIOUS INJURY OR DEATH.

To help avoid any serious injury or death, this product includes a wall strap to prevent toppling. We strongly recommend that this product be permanently fixed to the wall or other suitable surface. Fixing hardware is not included since different surface materials require different attachments. Please seek professional advice if you are in doubt what fixing hardware to use.

Regularly check your fixing device.

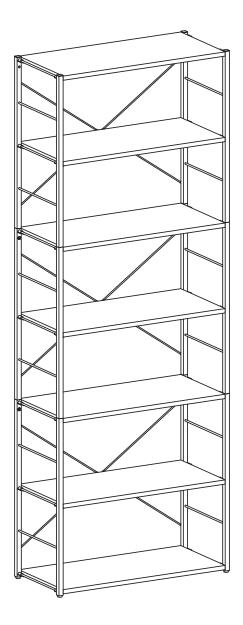




This product requires two people to assemble.

CARE INSTRUCTIONS: We recommend to wipe over with a dry micro-fibre cloth to remove any dust. Avoid using a damp or wet cloth and any cleaning chemicals as this may cause damage to the surface.





ELEMENTS

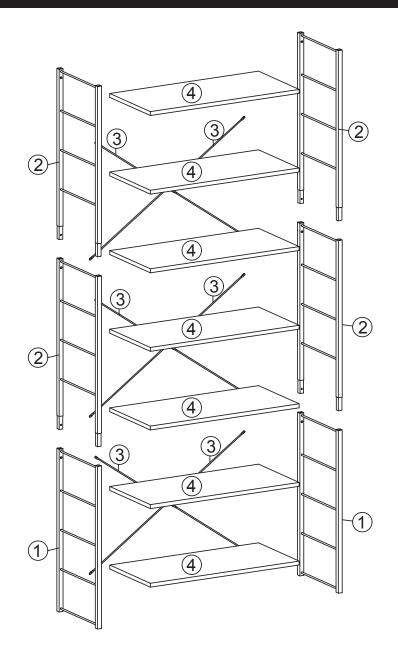


PARTS LIST

Α		В		С		D		Е		F		G	
9		(Metales		O								
	x28pcs		x56pcs		x8pcs		x3pcs		x1pc	x1	рс		x4pcs
Н		I		J		K		L		М		d	
		·					0		0	Destruction			
	x4pcs		x2pcs		x2pcs		x2pcs		x2pcs	x2p	cs		x15pcs




SILHOUETTE 7 SHELF STARTER KIT

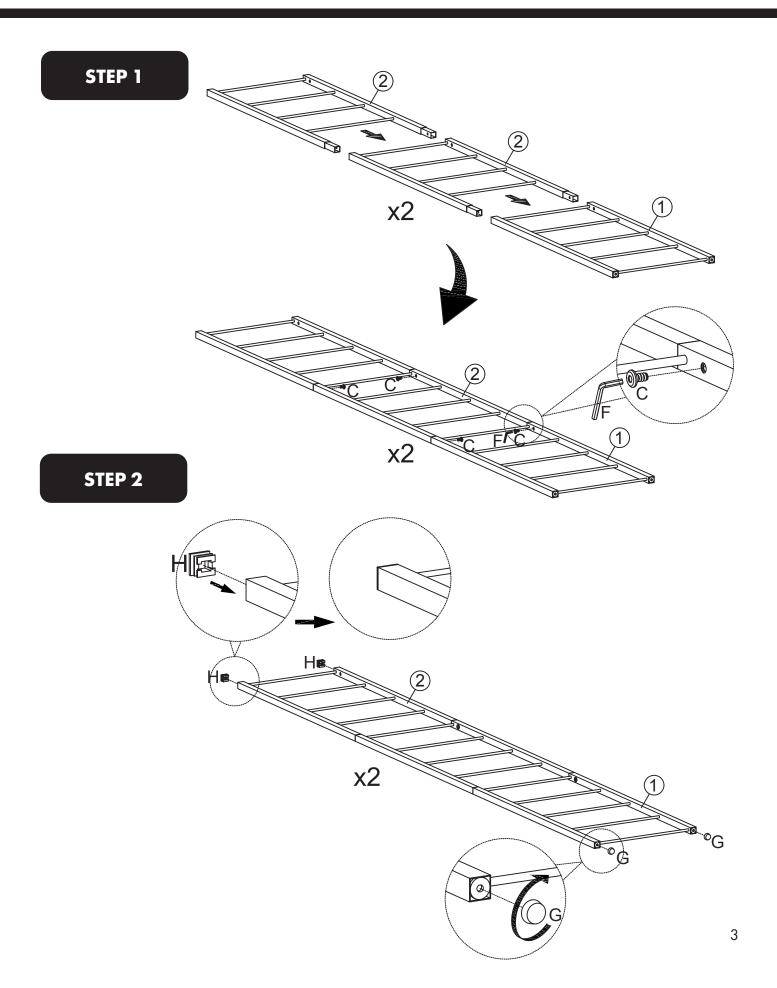







STEP 3

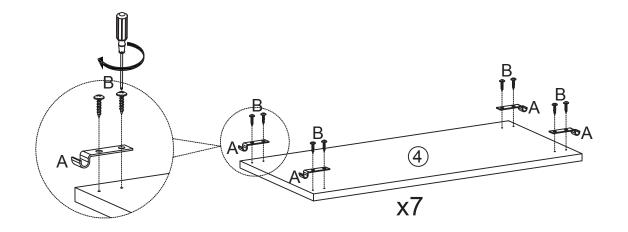

STEP 4

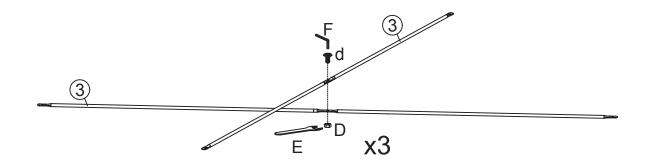


STEP 5

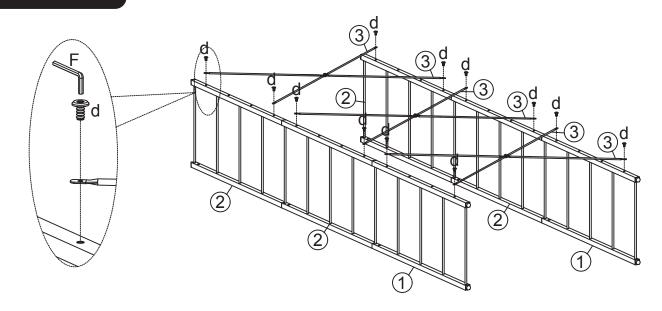




SILHOUETTE 7 SHELF STARTER KIT

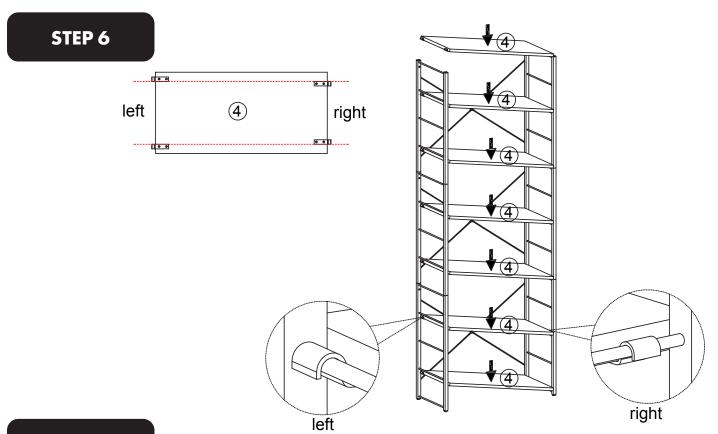

STEP 7

To prevent toppling, wall straps must be positioned below the top rung of each ladder. Ensure the strap is pulled tight before fixing to your wall.

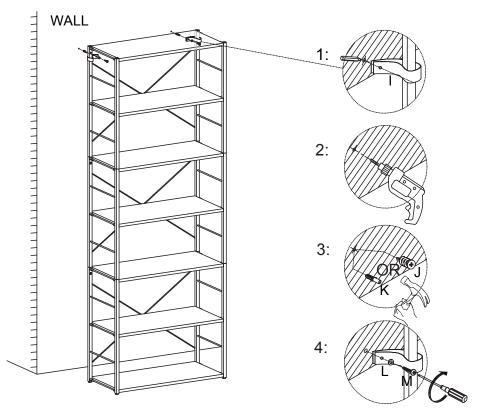

MADE IN CHINA
Distributed by:
Visy Retail Services Pty Ltd (AU): 1300 734 714
Visy Board Limited (NZ): 0800 443 058

flexistorage.com.au flexistorage.co.nz