



STEP 1

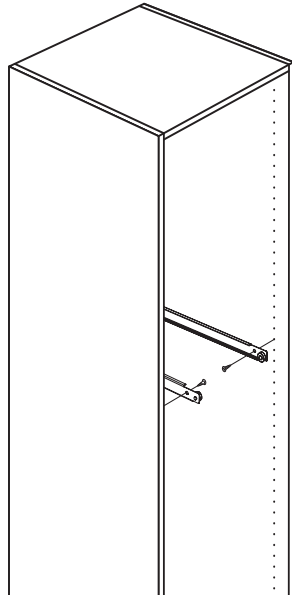

Fix Left and Right Runners so the Runner Wheel is positioned at the front of the cabinet. Make sure they are located at the same height
Hint: Count the pre-drilled holes from the top or bottom of cabinet so both runners are level.

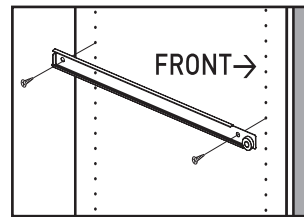

STEP 2

Insert Basket into the Runners. Tilt Basket so the wheel on the FRONT of the Basket fits into the gap in front of the Runner wheel. The basket should run freely.

