


## LIST OF PARTS

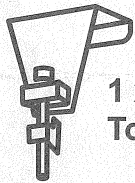

1 x  
Top Bracket



1 x Bottom Bracket

## TOOLS REQUIRED




Spirit Level




Allen Key (Supplied)


- 1** Hook the Top Bracket (with the screw mechanism) over the top of the door. (Pic 1)

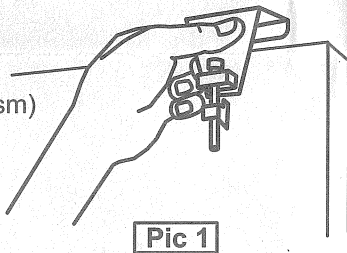



- 2** Attach the Wallstrip by inserting the lugs of the Top Bracket into the slots which are second from the top of the Wallstrip. (Pic 2)

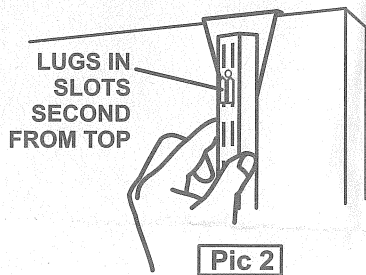

- 3** Attach the Bottom Bracket to the Wallstrip by inserting the lugs into the slots which are third from the bottom of the Wallstrip. Pull the Bracket down and secure under the door. (Pic 3)

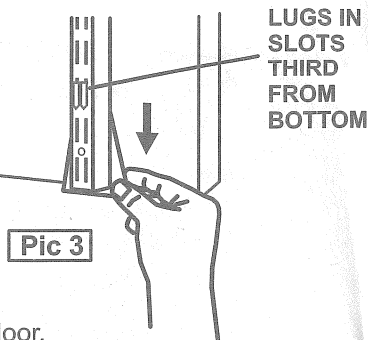

- 4** Using a spirit level, ensure the Wallstrip is vertical. (Pic 4)

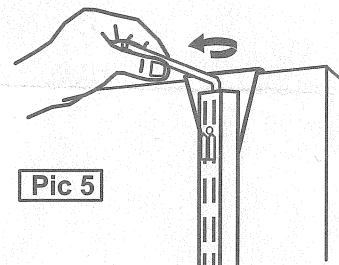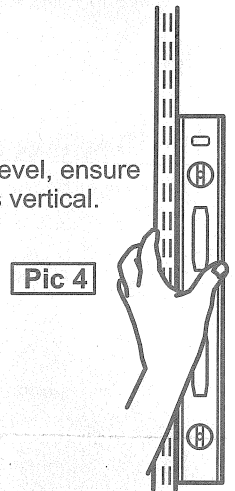

- 5** Tighten the screw in the Top Bracket using the Allen Key supplied. (Pic 5)

- 6** Attach Rack to slots in Wallstrip at your desired height. Secure by pushing downward. (Pic 6)

